

CALEX
H O L L A N D

SMART 

MULTI COLOR LED STRIP

Tunable white + color ambiance

WiFi 2,4 GHz



2412-2472MHz





2.5dBi



≤18dBm

EN	Getting started	3
NL	Aan de slag	4
FR	Démarrage	5
DE	Erste Schritte	6
PL	Rozpoczęcie	7
CZ	Začínáme	8
SK	Začínáme	9
ES	Empezando	10
IT	Iniziare	11
DK	Kom i gang	12
NO	Starter	13
SV	Komma igång	14
FI	Päästä alkuun	15

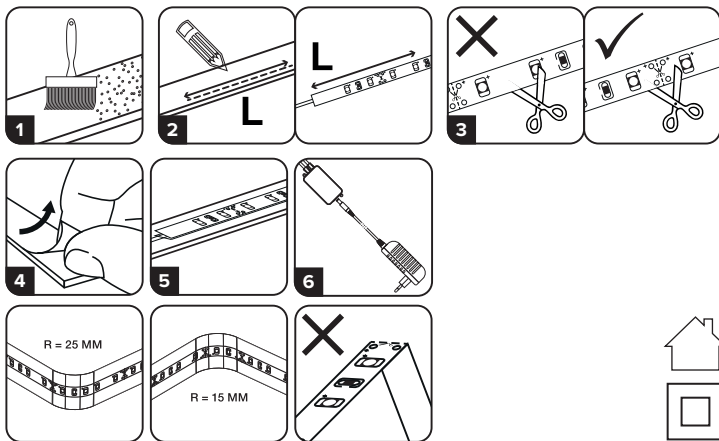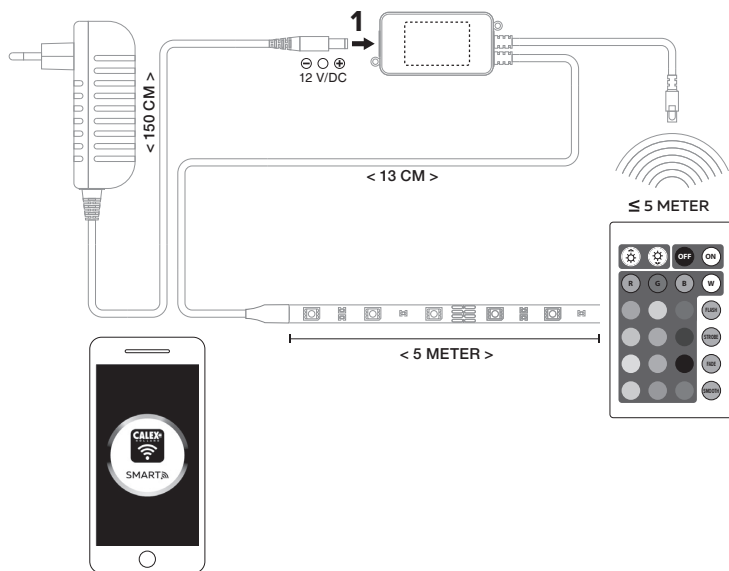

EN Getting started

Installation instructions

Please read the Safety Instructions first.

1. Clean the surface
2. Measure the desired length
3. Cut to size
4. Peel off protective foil
5. Stick the strip in place
6. Connect controller to the DC adapter (2)

Package content

Led strip, 1 pcs 3M tape; Battery (CR2025 - 3 V);
Remote control; Controller; Adapter

Specifications:

220-240 VAC / 50/60 Hz, Max. Power 24W

IP20 (indoor use only)

Intended use: indoors as additional (party) lighting
Dispose in a controlled manner for recycling

Remote control instructions

The remote control uses a CR2025-3.3V button battery. The remote control is on automatic standby mode when not in use. Normally the battery can be used for more than six months. The battery can be replaced by the same type.


Set up in 4 easy steps

Before you start write down your network name & password.

Note: this item only works on a 2.4GHz Wifi network, not on a 5GHz WiFi network. Please consult the manual of your router for settings.



1. Download the Calex Smart app from the Google Play store, the Apple Store or scan the QR code.



2. Open the app. First time user? Follow on-screen instructions to create your account. To add this device start by touching 'add device' (+) and follow the on-screen instructions.

3. Turn the device on. The lamp will start flashing. (If the lamp or device does not start flashing, switch it on and off 3 times. This will reset the lamp or device.)

4. Follow the on screen prompts to finish installation.

If you get the notification the product only works on 2.4GHz networks you should change the WiFi-frequency of your network to 2.4GHz only in the setting menu of the router.

SV Komma igång

Installationsinstruktioner

Läs säkerhetsinstruktionerna först.

1. Rengör ytan
2. Mät önskad längd
3. Klipp i storlek
4. Skala av skyddsfolien
5. Stick remsan på plats
6. Anslut regulatorn till DC-adaptren (2)

Förpackningens innehåll

Ledlist, 5 fot; Batteri (CR2025 - 3 Volt); fjärrkontroll; controller; adapter

specifikationer:

220-240 VAC / 50/60 Hz, maximal ström 24W

IP20 (endast inomhusbruk)

Avsedd användning: inomhus som extra (fest) belysning

Kassera på ett kontrollerat sätt för återvinning

Instruktioner för fjärrkontroll

Fjärrkontrollen använder ett CR2025-3.3V-knappbatteri. Fjärrkontrollen är i automatisk standby-läge när den inte används. Normalt kan batteriet användas i mer än sex månader. Batteriet kan bytas ut mot ett av samma typ.

Ställ in i fyra enkla steg

Skriv ner ditt nätverksnamn och lösenord innan du börjar.

Obs! Det här föremålet fungerar bara i ett 2,4 GHz Wifi-nätverk, inte på ett 5 GHz WiFi-nätverk. Vänligen se din routers manual för inställningar.



1. Ladda ner Calex Smart-appen från Google Play-butiken, Apple Store eller skanna QR-koden.



2. Öppna appen. Förstagångsanvändare? Följ instruktionerna på skärmen för att skapa ditt konto. För att lägga till den här enheten börjar du genom att trycka på 'lägg till enhet' (+), och följer instruktionerna på skärmen.

3. Slå på enheten. Lampan börjar blinka. (Om lampan eller enheten inte börjar blinka, slå på och stäng av den 3 gånger. Detta återställer lampan eller enheten.)

4. Följ anvisningarna på skärmen för att slutföra installationen.

Om du får meddelandet att produkten bara fungerar med 2,4 GHz-nätverk, bör du ändra WiFi-frekvensen för ditt nätverk till enbart 2,4 GHz i routerns inställningsmeny.